


USER MANUAL

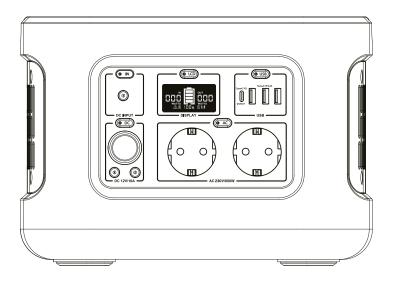

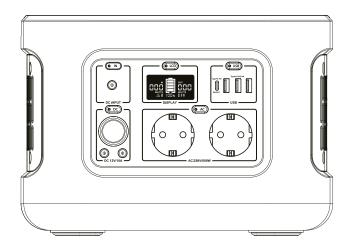

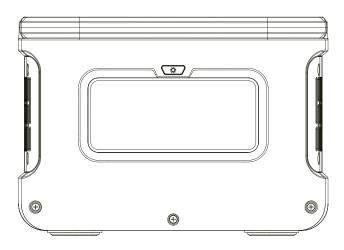



CHARGE FIRST! Before using your new power station, plug it into a suitable power outlet until it is fully charged. Then you can start your exciting journey with it.

FAQs

1. What type of battery is in an Power Station?

Contains a battery pack which consists of an array of cylindrical Lithium-ion battery cells with high energy density.

2. How do I know if my Power Station is charged?

To Check the charge level of the, refer to the LCD battery Display.

- 3. Can I charge the while supplying power at the same time? The power station could power the devices while recharging itself.
- 4. How do I know if my device will work with the power station?

You will need to check the amount of power your device requires. This may require some research on your end. An online search or examining the user guide for your device should suffice. To be compatible with the power station you should use devices that require less than 600W.

WHAT'S IN THE BOX








Power Station

AC Adapter & AC Cable (2 Parts)

User Manual

CHARGING

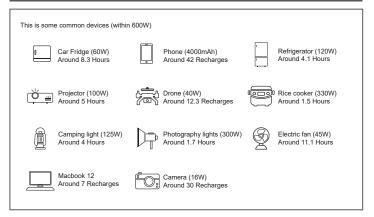

RECHARGEMENT

Before using or storage, plug your Power Station into the wall plug until it is fully charged. If the LCD shows less than 20% capacity, plug it into a power source, like an AC outlet or a solar panel, as soon as

possible. There are four ways to recharge your Power Station:

DC 5.5*2.5mm Input



Wall Charger (120W) Around 5.5 Hours



Car Charger (120W) Around 5.5 Hours



100W Solar Panels(Optional) Around 7.5 Hours (Depending on Weather)

Type-C Input



Type-C Wall Charger (PD 100W) Around 6.5 Hours

DC input and Type-C input Simultaneously (220W)

SPECIFICATIONS

Output			
AC output	Rated voltage	230V	
	Rated power	600W	
	Peak power	1000W	
	Frequency	50Hz	
DC*2 Output	Rated voltage	13.3V	
	Rated current	10A	
DC Output Ciger Socket	Rated voltage	13.3V	
	Rated current	10A	
USB-A*3 Output	Rated voltage	5V	
	Rated current	2.4A	
USB-C*1 Output	PD: 100W Max	5V3A, 9V3A,12V3A,15V3A,20V5A	
Floodlight	Lux	200 Low / 800 Middle / 1400 high	
Input			
DC Input	Rated voltage	12V-24V(0-10A)	
	Rated power	Max 120W	
USB-C*1 Input	PD: 100W Max	5V3A, 9V3A,12V3A,15V3A,20V5A	
DC input and USB-C*1 input at the same time to recharge the power station,			

the input power can be up to 220W max

Battery			
Rated capacity	512Wh		
Battery cell type	Lithium-ion		
	General		
Working environment condition	Relative humidity: 20%-90%		
Working environment condition	Temperature: 32-104°F (-10-40°C)		
Size	290*210*204mm±5mm		

ATTENTION



Not permitted on aircrafts



To preserve the battery lifespan please use and recharge at least once every 6 months.



Use original or certified charger and cables.



Avoid extreme temperature



Avoid Dropping



Do not disassemble



It's not waterproof, do not expose



Please dispose of batteries and electronic goods in accordance with local regulations

DISCLAIMER

DISCLAIMER

Our company cannot be held liable for damages caused by fire, earthquake, use by a third party, other accidents, intentional misconduct on the part of the customer, abuse or other abnormal conditions

Do not repair any damage to the AC plug or power supply on your own.

The warranty covers all terms and conditions of the warranty. Contents that are not specified in the warranty terms and conditions are beyond our responsibility.

Our company assumes no liability for damaged caused by incorrect use or non-compiance with this instruction

Intended use: The power station unit is intended as a power supply for electronic devices with a maximum power comsumption of 600W. Our product is not suitable to be used with equipment that relates to one's own personal safety and relies heavily on electricity, such as medical devices, equipment for nuclear facilities, the manufacture of air and spacecraft, etc. We therefore asssume no liability for accidents involving personal safety, fires, or machine failures, caused by usinig our product with the aforementioned devices.

WARRANTY

Limited WarrantyOur company warrants to the original comsumer purchaser that the our company product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in the
"Warranty Period" section below, subject to the exclusions set forth below. This warranty statement sets forth our total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

Warranty Period

The warranty period is 12 months. In each case, the warranty period is measured starting on the date of purchase by the original cunsumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

Our company will repair or replace (at our option) any our company product that fails to operate during the applicable warranty period due to defect in workmanship or material. If a valid claim is made during the applicable period, our company, at its option, will either (1) replace the product, or (2) exchange the product with a product that is of equal value. A

replacement product assumes the remaining warranty of the original product or 180 days from the date of replacement, whichever is greater. Coustomer is responsible for the return shipping costs.

Limited to Original Consumer Buyer

The warranty on our product is limited to the original consumer purchaser and to any subsequent owner.

Our warranty does not apply to (i) any product that is misused, abused, modified,damaged by accident, or used for anything other than normal consumer use as authorized in our current product literature, or (ii) any product purchased through an online auction house, our warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least every 6 months then

How to Receive Service

To abtain warranty service, contact our customer service team

The information contained herein is subject to change without notice. The only warranties for our company products and services are set forth in the warranty statements accompanying such products and services, our company shall not be liable for technical or editorial errors or omissions contained herein. This user guide describes features that are common to most models

POWER

I CD Screen Button

Press the LCD button to check the remaining battery.
AC Button/DC 12V Button/USB Button

Turn on each output by pressing its power button before charging your device as it does not output automatically. Turn off each output by pressing its power button as it does not turn off automatically or it will drain the battery out

SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS

owing instructions to ensure safe usage



Noncompliance may very likely lead to serious injury or death

DO NOT disassemble, repair or modify the unit or the battery.

DO NOT place the unit close to or in a fire or expose it to heat. Keep out of direct sunlight.

DO NOT charge, use or store the unit in a bathroom or in an area exposed to rain or moisture

Only use the output socket to power external devices. Never connect the output to mains power under any

circumstances.

DO NOT touch the unit or the plug-in points if your hands are wet.

DO NOT cube the unit or the plug-in points if your hands are wet.

DO NOT cub your eyes if fluid from inside the unit should get in your eyes.

DO NOT use any inappropriate power cords.

DO NOT operate the unit above the specified input voltage.

DO NOT use the unit if it is not functioning correctly.

DO NOT move the unit if it is reharging or in use.

DO NOT move the unit if it is reharging or in use.

DO NOT put fingers or hands into the product.

DO NOT use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredicable behavior resulting in fire, explosion or risk of injury.

DO NOT disassemble the power pack, take it to aqualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.



WARNING
Noncompliance may lead to serious injury or death

Use and store the unit only i a clean and dry environment. DO NOT use and store in dusty and wet environment. Check the unit prior to every use. DO NOT use the unit if it is damaged, broken.

DO NOT use the unit if the power cord is damaged or broken.

Keep the unit away from childred. DNO NOT let childred use the poewr supply unit.

Keep this product away from pets.

DO NOT use or store the unit in an area or environment with high temperature.

Should fluid from inside of the unit come in contact with your skin or clothing, wash the affected areas with tap water.

DO NOT charge the unit on its side or upside down while in use or storage.

DO NOT use accessories for other usage.

WARNING- RISK OF EXPLOSIVE GASES To reduce risk of batton and the

To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of the battery. Review cautionary marking on these products and on engine

LCD

Power Level Percentage

Check the battery level by pressing the display button before using. If battery is at a low level, charge first.

Power of Input & Output (W)

If the Power Station total output exceeds 600W, it will automatically shut off.

Please ensure the power consumption is less than 600W, then press the power button.

Low & High Temperature Alarm
The power station can power your devices at temperature sranging from -10~40°C(14~104°F).
If your working temperature is outside this range, the power station may stop working.

Warning symbol

| Input overvoltage protection
| The symbol flashes for 5 seconds and then turn off the input. When input overvoltage protection is released, the symbol will not display again.

. Output overload protection
The symbol flashes for 5 seconds and then turns off the output.
The symbol will not be displayed when the overload is removed
: Lower Power Alarming


This symbol flashes to indicate that the product is in a low power state, power less than 3%

Sylindon leasness of indicate that the product is in a row power state, power less than 5%.
 Low temperature alarming
 en this symbol display, please stop charging or discharging this power station immediately to avoid damaging.
 High temperature alarming

High temperature alarming
 High temperature alarming
 When this symbol display, please stop charging or discharging this power station immediately to avoid damaging.

LED FLASHLIGHT

Short press the button: weak light - bright light - strong light - turn off cycle in turn. Double click the button to turn on SOS function and press the button again to turn off the lighting.

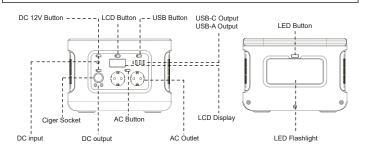

PERSONAL PRECAUTIONS

- NEVER smoke or allow a spark or flame in vicinity of battery
 Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
- 3) DO NOT expose a power pack to fire or excessive temperature. Exposure fire or temperature above 130 C may cause explosion.

CAUTION

Noncompliance may lead to inuries and /or property damage.

If rust, peculiar odors, overheating or other abnormal circumstances are observed, stop using the unit immediately and contact the dealer or our customer service center.

The unit complies with all legal requirements for transport of dangerous goods

Make sure that the unint is properly secured when transporting it in a motor vehicle.

Only charge, use and store the unit within an ambient temperature of 0 to 40 (32 - 104F)

Switch the unit of immediately if it has ccidentally fallen, was dropped or was exposed to vibrations.

Carefully read the instructions for the electric devices that you intend to connect to your power supply unit. Make sure that the device you are connecting is switched off before you connect it.